

Popcorn Machine Owner's Manual

For Models:

6096 8 oz Foundation Black Full
6097 8 oz Foundation Red Full
6098 8 oz Foundation Blue Full
6099 8 oz Foundation Black Top
6100 8 oz Foundation Red Top
6101 8 oz Foundation Blue Top

6102 6 oz Foundation Black Full
6103 6 oz Foundation Red Full
6104 6 oz Foundation Blue Full
6105 6 oz Foundation Black Top
6106 6 oz Foundation Red Top
6107 6 oz Foundation Blue Top

6108 4 oz Foundation Black Full
6109 4 oz Foundation Red Full
6110 4 oz Foundation Blue Full
6111 4 oz Foundation Black Top
6112 4 oz Foundation Red Top
6113 4 oz Foundation Blue Top

5800 Good Time Black Top 8oz
5805 Good Time Red Top 8oz
5810 Good Time Black Full 8oz
5815 Good Time Red Full 8oz

ASSEMBLY INSTRUCTIONS

8OZ POPPER ASSEMBLY

Models:

Voltage: AC 220V-240V 50Hz Input Power: 860W

6096 8oz Foundation Black Full

6097 8oz Foundation Red Full

6098 8oz Foundation Blue Full

6099 8oz Foundation Black Top

6100 8oz Foundation Red Top

6101 8oz Foundation Blue Top

1. Use bolts & washers (Package B) provided to connect the long stand (F) and the 2 pc. square poles (E) together.
2. Connect the completed Step 1 (above) with the short stand (G) by the bolts & washers (Package B).
3. Insert axle (H) into short stand (G). Place washers (Package C) onto each side of wheels (J) and then secure with round cap nuts by using the wrenches provided (Package D).
4. For more convenient assembly, turn the storage cabinet (K) upside down. Insert both ends of the short and long stand onto the bottom of (H) and attach by bolts (Package B).
5. Turn the completed unit back to its upright position. Install the handrail (D) onto the left hand side and the working platform (C) on the right hand side by the nuts and bolts with washers included in Package A.
6. Place the main unit (A) onto the top side of the storage cabinet. (**Caution:** Power cord outlet should be inserted into the u-shape position).
7. Place the pot (kettle, B) onto the hanger. (**Note:** Roller bar should be on the door side and also be sure that gears between pot and ceiling are perfectly matched).
8. Connect the power plug from the main unit ceiling with the socket on the bottom of the pot.
9. Open the door of the storage cabinet and release the spring shaft beneath the main unit in order to fix the main unit to the storage base.

8OZ PARTS LIST

- A. Main unit (1)
- B. Popping pot (1)
- C. Working platform (1)
- D. Hand rail (1)
- E. Square pole (2)
- F. Long stand (1)
- G. Short stand (1)
- H. Wheel axis (1)
- J. Wheels (2)
- K. Storage cabinet (1)
- L. Popcorn scoop (1)
- M. Measuring cup set


**Note: See next page
for assembly diagram.**

N. Parts box which includes

- a. Package A (plated bolts/nuts/washers [8 each])
- b. Package B (bolts [8 each], washers [4 each])
- c. Package C (nuts with round cap/washers [2 each])
- d. Package D (wrench [2])

80Z POPPER ASSEMBLY

Note: Main unit alone can be used when placed on a stable countertop for operation.

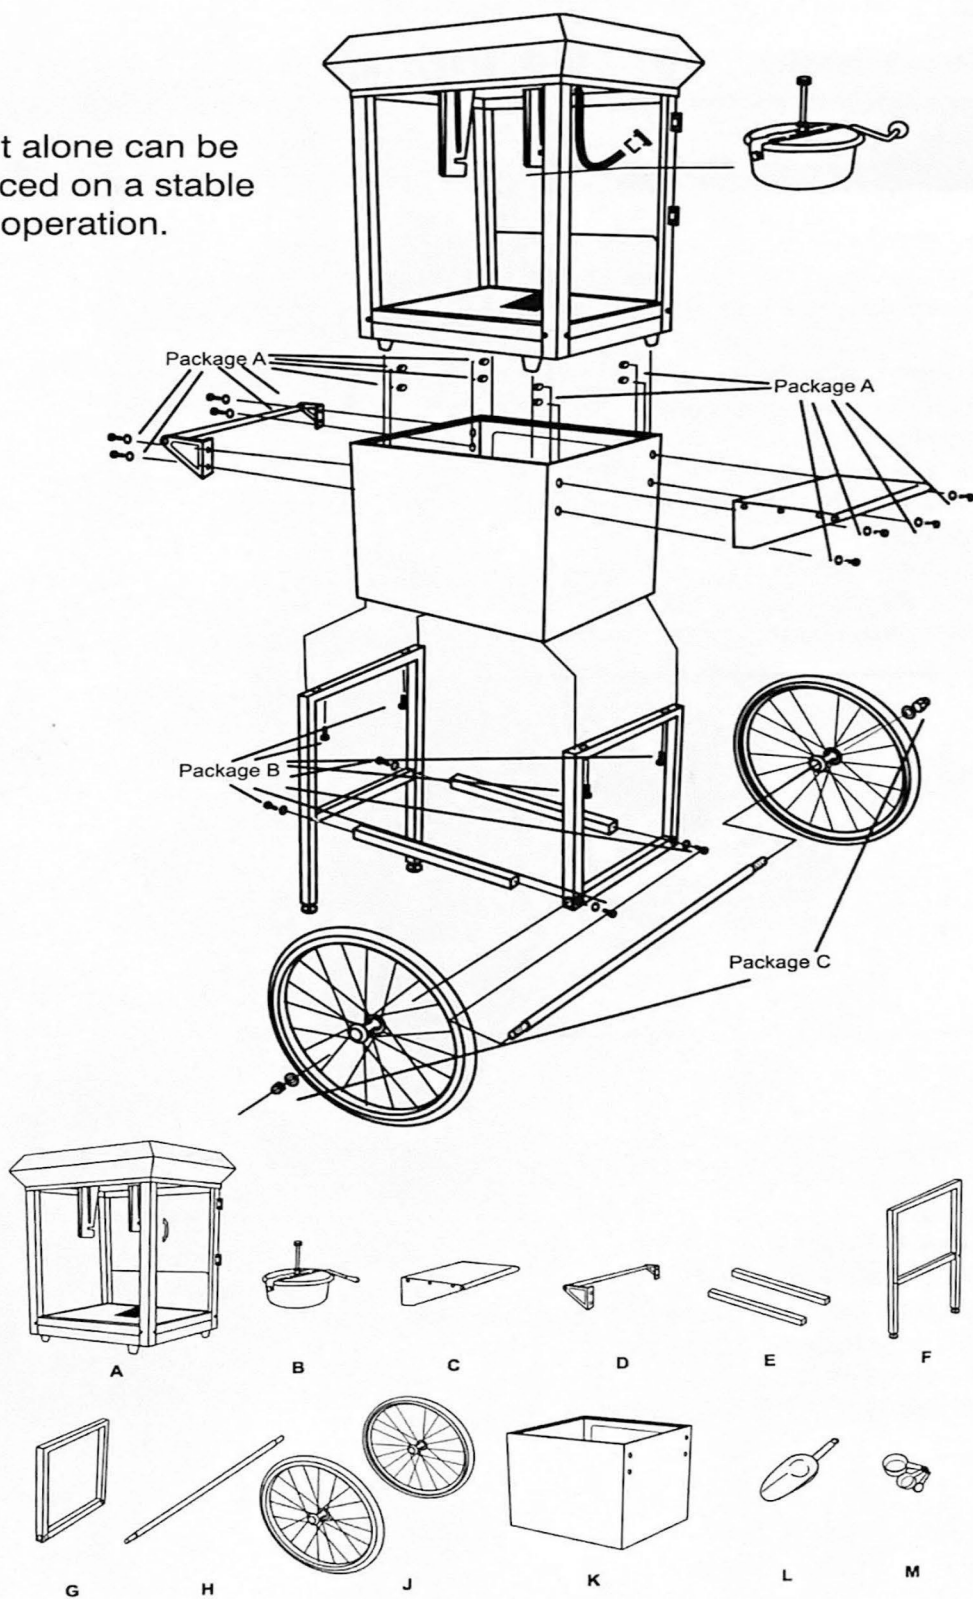

OPERATING PROCEDURES

Please Note: If you are using your popper for the first time, clean the interior of the glass surfaces and wipe the inside of your popper with a clean damp sponge before heat is applied. Please follow these procedures for the best operating results and long machine life.

1. Place the corn popper on a dry, level surface. Protect from rain and other weather elements. Do not install near pool or water. Plug the unit into a suitable grounded electrical outlet. (Please check the electrical specs. Be sure that your power source matches the rating label specified next to the power cord).
2. The Main unit will have either 2 function switches or 3 function switches depending upon which model you have purchased. 4oz machines and Popcorn Anytime machines have 2 function switches.
3. Hook the stainless steel pot onto the hanger of the main unit. (**Note:** Roller bar should be on the door side and also check to be sure that the gears between pot and ceiling are perfectly matched).
4. Plug in the power cord to the popcorn maker.
5. Switch the light and heater to ON (I & III) and then add a suitable amount of butter or oil (Fig. 1). While the amount is dependent upon your taste, please do not exceed 1/2oz.

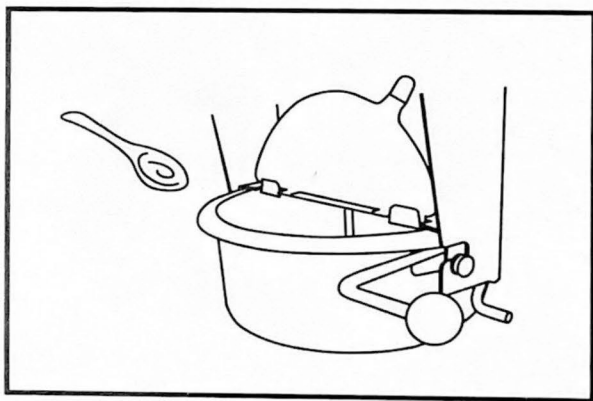


Fig.1

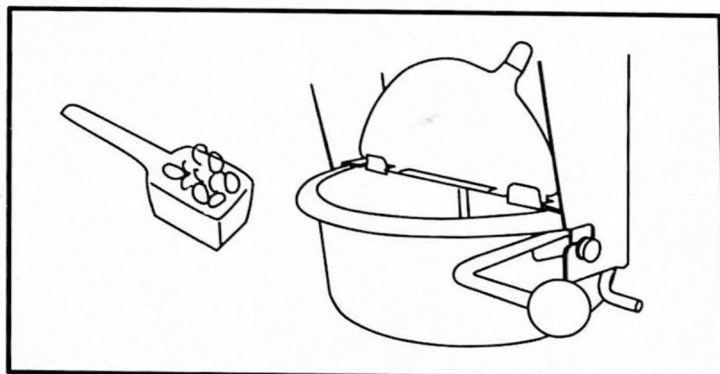


Fig.2

6. Preheat kettle for 3 to 4 minutes with oil added (until steam comes out from the pot). If using The Great Northern Popcorn Co. Gourmet Tri-Pak, cut off top of oil section on pouch and squeeze oil into pot.
Please Note: DO NOT USE LIQUID SUGAR OR HONEY AS THIS MAY DAMAGE KETTLE AND CAUSE SMOKING AND/OR INJURY FROM HOT SUGAR.
7. Next pour popcorn and seasoning from Gourmet Tri-Pak pouch into pre-heated oil. (Fig. 2) If using bulk kernels, measure the amount of corn by using the measuring scoop provided. Use one scoop per batch. Open the lid and add the popcorn. **Caution:** Lid is hot; we recommend wearing oven mitts or potholders. Close lid.

OPERATING PROCEDURES-Continued

8. Switch the Stirrer to ON (II). **Please Note:** 4oz and Popcorn Anytime machines can skip this step. (Fig. 3)
9. Close the doors on the main unit carefully.
10. Popcorn starts popping out through the lid after about 2 to 3 minutes. (Fig. 4)
11. When popping stops (no more popping sound from pot), switch the stirrer and pot heater to OFF (II & III) Popping is completed. Rotate the roller bar of the pot and pour out all remaining popcorn. Gently shake if necessary.
12. Heater switch (III) must remain OFF if the unit is not popping. Only the spot light warmer should be left ON, this will keep the popcorn warm, dry and tasty for a longer period of time.
13. Serve popcorn with scoop provided. **Note:** Do not add butter or other liquid flavoring in main unit popcorn bin. Avoid a big mess! Remove popcorn to suitable serving bowl or popcorn before adding this type of flavoring.
14. Always remove plug from power supply before cleaning and if the unit is not being used for a period time.
15. Repeat steps 7-10 to continue popping.

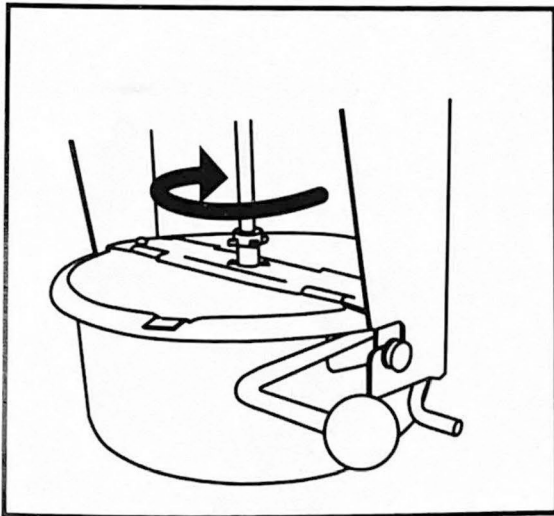


Fig.3

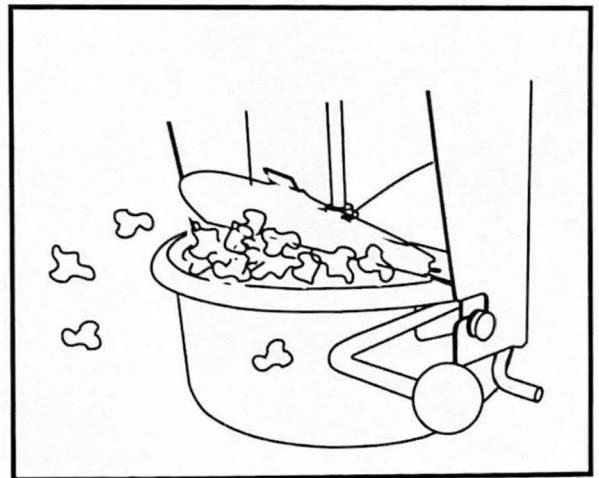


Fig.4

Use the following chart for popcorn batches depending upon your machine size:

Machine Size

4oz
6oz
8oz

Unpopped corn by weight

4oz
6oz
8oz

CLEANING AND MAINTENANCE



CAUTION

- After popping cycle is complete, the popping pot will be very hot. Use extreme care when handling.
- Remember to turn the heat switch to the OFF position after the finish of the pop cycle.
- Unplug unit **BEFORE** removing heat pot from hanger. Use caution not to bump heat lamp bulb during pot removal.

- To maintain quality taste and popping conditions in your popper, we recommend that you thoroughly clean the heat pot after using 3 to 4 times or before prolonged periods of storage.
- Switch OFF (II & III). Pour 6 to 10 oz. of water (NO detergent is necessary) into inner pot.
- Switch ON the stirrer (II) and heater (III) to boil the water and allow the stirrer to rotate that will help remove debris on kettle surface. Pour out the water after about 1 to 2 minutes of boiling.

Caution: Hot kettle! Handle with oven mitts. Keep children at a safe distance from popper during procedure.

- Repeat the same procedure 2 to 3 times to get the best result.
- Switch OFF the machine and wait for the popping pot to cool. Clean the inside and outside of the pot by brush and wet towel. **Caution:** DO NOT immerse the heat pot in water.
- After using the popcorn machine, users should use wet towel to clean up the main unit, main body and glasses; we strongly recommend to tidying up the rubbish tray frequently so that there is no food spoilage left behind.