

Mobile Refrigerated Cart

Single Compartment

Model:

1000-MR1



- **INSTALLATION**
- **OPERATION**
- **MAINTENANCE**



W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 USA
PHONE: 262.251.3800 • 800.558.8744 USA/CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY
www.alto-shaam.com

1000-MR1

MOBILE REFRIGERATED CART



- The Alto-Shaam Mobile Refrigerated Cart is not just a refrigerator on wheels, but a well designed and efficient system for storing and transferring refrigerated food products.
- Adjustable shelves allow for the storage of plated items, pans or other items.
- Full perimeter stainless steel bumper, transport handles, heavy duty casters along with the cart's reduced height provide easy mobility.
- Electronic LED digital display monitors inside air temperature in Fahrenheit or Celsius.
- Full access front gives the operator 54" (1372mm) of clear, unobstructed storage.
- Non-magnetic stainless steel surfaces resists corrosion.
- Environmentally safe refrigerant.
- All mechanical equipment is easily accessible for ease in servicing.
- Rear mounted cooling coil balances and distributes air evenly.
- Condensate from the cooling coil is diverted to a condensate evaporator, therefore, it is unnecessary to have an alternate means of water disposal.


Single cavity model with 21 gauge stainless steel exterior and door, fully insulated with high density foamed-in-place polyurethane. Door is hinged left as standard, and includes one (1) positive door latch with magnetic-mechanical closing and cylinder door lock. 22 gauge non-magnetic (non-corrosive) stainless steel interior includes two (2) removable stainless steel side racks with 25 shelf positions spaced on 1-1/4" (32mm) centers, three (3) powder coated shelves, 27-5/32" x 20-11/16" (690mm x 525mm), and one (1) powder coated shelf, 20-11/16" x 19-3/32" (525mm x 485mm).

The mobile refrigerator is controlled by one (1) on/off switch, with a thermostat preset at a temperature of 2°C (36°F). A LED display monitors the inside temperature. Unit includes a full-perimeter stainless steel bumper guard along with one (1) transport handle on each end of the cart for a total of two (2) transport handles. Cart is furnished with removable side racks, powder coated shelves, one (1) set of 5" (127mm) heavy duty casters — two (2) rigid and two (2) swivel with brake. A 1/4 horsepower compressor system utilizes 404a refrigerant, generating 1815 BTU (457 KCAL) per hour.

☐ **MODEL 1000-MR1 - 50Hz:** Single compartment Mobile Refrigerated Cart

FACTORY INSTALLED OPTIONS

- Left-hand door swing is standard.
 - ☐ Specify right-hand door as a special order.
- Temperature display in Celsius is standard.
 - ☐ Specify degrees Fahrenheit on order as required.

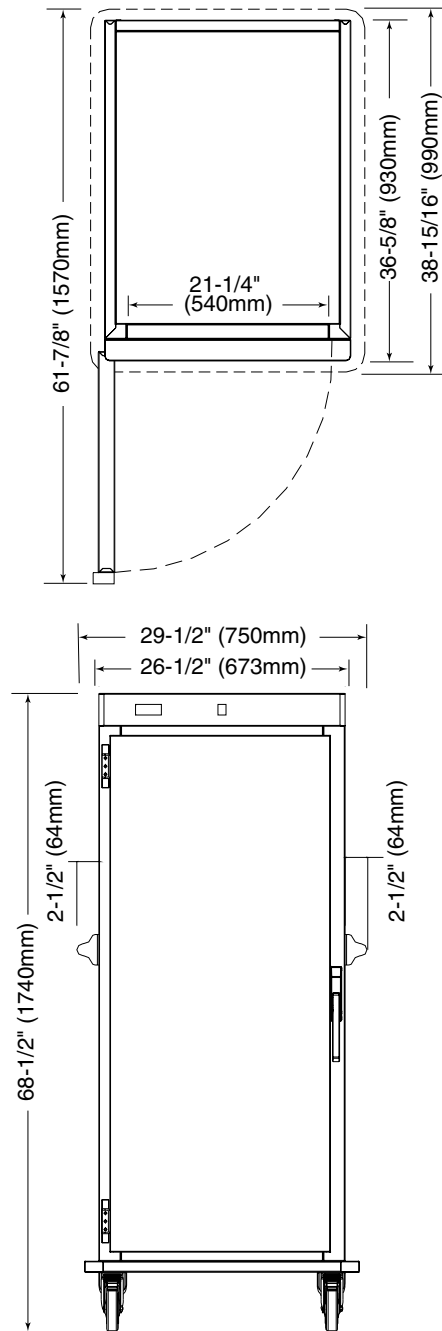

DIMENSIONS: H x W x D

EXTERIOR:

68-1/2" x 29-1/2" x 38-15/16"
(1740mm x 750mm x 990mm)

INTERIOR PER COMPARTMENT:

21-1/4" x 27-1/4" x 54-11/32"
(540mm x 692mm x 1380mm)

ELECTRICAL

VOLTAGE	PHASE	CYCLE/HZ	AMPS	kW	CORD & PLUG
220-240	1	50	4.5	.57	⊙ ⊙ TIS 166-2549

PRODUCT/PAN CAPACITY

252 lb (114 kg) MAXIMUM

VOLUME MAXIMUM: 158 QUARTS (200 LITERS)

INTERIOR NET VOLUME WITHOUT SHELF AND TRAY: 490 LITERS

FULL-SIZE PANS: GASTRONORM 1/1:
Twenty-one (21) 20" x 12" x 2-1/2" (530mm x 325mm x 65mm)

FULL-SIZE SHEET PANS:
Thirteen (13)* 18" x 26" x 1" ON WIRE SHELVES ONLY
— PLUS Three (3) additional full size pans

*ADDITIONAL SHELVES REQUIRED

CLEARANCE REQUIREMENTS

Full perimeter bumper accommodates all clearance requirements.

INSTALLATION REQUIREMENTS

- Cart must be installed level.
- Cart must not be installed in any area where it may be affected by steam, grease, dripping water, extreme temperatures, or any other severely adverse conditions.

OPTIONS & ACCESSORIES

Powder Coated Wire Shelves

- ☐ 27-5/32" x 20-11/16" (690mm x 525mm) SH-29890
- ☐ 19-3/32" x 20-11/16" (485mm x 525mm) SH-29891

WEIGHT

NET: 353 ± 22 lb (160 ± 10 kg)	SHIP: 384 ± 22 lb (174 ± 10 kg)
-----------------------------------	------------------------------------

CARTON DIMENSIONS: (L x W x H)

31-15/16" x 42-3/4" x 70-7/8"
(810mm x 1085mm x 1800mm)

ALTO-SHAAM MOBILE REFRIGERATED CARTS

1.0 INTRODUCTION

This technical manual provides information on the installation, operation, maintenance and inspection of this unit. A complete parts breakdown is provided.

1.1 EQUIPMENT DESCRIPTION

The unit consists of the following:

Storage compartment: The insulated food storage compartment is clear storage area. Included in this area are the adjustable shelves and cooling coil.

Doors: Access to the storage compartment is through a hinged-mounted insulated door.

Condensing unit Compartment: This area contains the condensing unit along with the necessary controls.

Evaporator Coil: The evaporator coil is located in the storage compartment and is responsible for distributing the cold air associated with the refrigeration system.

1.2 EQUIPMENT SUPPLIED

The unit is shipped from the factory fully assembled except the adjustable shelving that will require positioning on the side racks. The complete assembly is palletized and crated to reduce the possibility of damage in shipping and storage.

1.3 LEADING PARTICULARS

Refrigerant: 404a

Electrical :
1000-MR-1

220-240VAC
50 Hz, 1Ø
4.5 Amps



TIS166-2549

Net 353±22 lb (160±10kg)

Shipping 384±22 lb (174±10kg)

2.0 FUNCTIONAL DESCRIPTION

This unit is self-contained, automatically controlled, continuous duty perishable food storage system. It is designed with the intent and purpose of storing cold food items. The operating temperature is automatically monitored by controls that are factory-set to

maintain a predetermined, adequate condition.

The unit consists of two basic assemblies:

a) *Condensing Unit Compartment* which includes the condensing unit, the electrical control panel with power switch and terminal box, and a heated condensation evaporator.

b) *Storage Compartment* which consists of the insulated clear storage area for perishable food items requiring a temperature range of 37° to 40°F (3° to 4°C). The clear storage area includes adjustable shelving.

2.1 SYSTEM OPERATION

The primary focus for the design of the refrigerated cabinet is for the safe storage of food products which require refrigeration. Considerable engineering attention was placed on the qualities of function and serviceability.

The refrigeration system is a closed loop system. Unless the system develops a leak, adding additional refrigerant is not necessary.

3.0 START UP PROCEDURE

The refrigeration system is completely factory-assembled, pre-charged and ready for operation. The control has been set to display temperature in degrees Fahrenheit or degree Celsius as specified on the original order.

To energize the system, it is only necessary to locate the power supply cord and connect it to a proper electrical supply source. Once the supply cord has been connected to a power source, the unit can be started by switching the power control switch to the "ON" position.

3.1 SHUT-DOWN PROCEDURE

To shut-down, place the power control in the "OFF" position and open the door to allow the cabinet interior temperature to equalize with the room temperature.

Use a mild detergent diluted in warm water to wash the interior and exterior surfaces of the cabinet.


PROCEDURES

CONTROL AND INDICATION		
NAME	TYPE	FUNCTION
Thermostat	Contact Points	Cycles the refrigeration system (automatic)
Power Control Switch(ON/OFF)	Contact Points	Terminates power to the unit
LCD display		Indicates continuous cabinet temperature

START-UP PROCEDURE	
OPERATION	RESULTS
Activate system by electrical service cord into electrical supply source Turn power switch to the "ON" position.	The compressor should immediately come on-line and the evaporator fan activate.
With the door closed and the storage area empty of product, wait for a period of 1 hour	The temperature in the storage area will begin to decrease
Verify correct operating temperature. Begin stocking the containment area when the proper operating temperature has been reached.	Cabinet will have reached the proper operating temperature of 36°F ± 3°F(2°C ± 1°C)

3.3 EXTENDED PERIOD OF INACTIVITY

This unit is designed for continued use at automatically cycled intervals. In case of an extended shut-down, the food storage compartment must be cleaned and wiped dry to minimize the potential of odor build-up during shutdown.

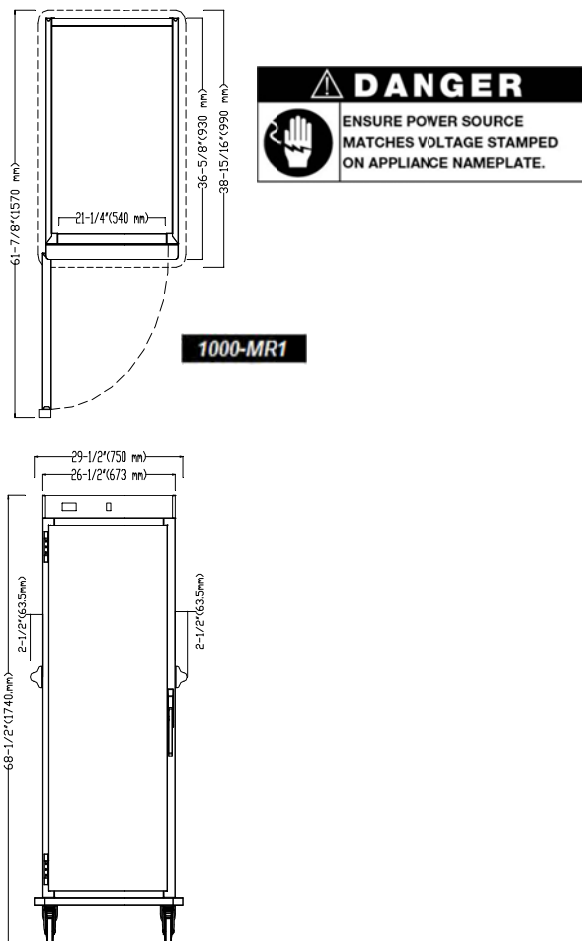

3.4 ERROR CODES

ALARM SIGNALS		
MESSAGE	CAUSE	OUTPUTS
"P1"	Room probe failure	Compressor output acc. To. Par. "Con" and "COF"
"P3"	Third probe failure	Outputs unchanged
"P4"	Fourth probe failure	Outputs unchanged
"HA"	Maximum temperature alarm	Outputs unchanged
"LA"	Minimum temperature alarm	Outputs unchanged
"HA2"	Condenser high temperature	It depends on the "Ac2" parameter
"LA2"	Condenser low temperature	It depends on the "bLL" parameter
"dA"	Door open	Compressor according to rrd
"EA"	External alarm	Output unchanged
"CA"	Serious external alarm (i1F=bAL)	All outputs OFF
"CA"	Pressure switch alarm (i1F=PAL)	All outputs OFF

OPERATION / CLEANING

4.0 OPERATING PROCEDURE

The purpose of this mobile refrigerator is to maintain cold foods at proper serving temperatures. The unit should be used for the intended purpose only.

a) Adjust the position of the shelves to accommodate required storage needs.

b) Switch the power to the "ON" position

c) Pre-chill the cabinet to the full, factory preset temperature of 36°F ±3°F (2.0°C)

d) Load the refrigerator with chilled foods only. Before loading, use a food thermometer to make certain all products are at a temperature of 41°F (5°C) maximum or less. Cover foods to reduce moisture build-up on the inside wall of the cabinet. To maintain the proper refrigerated food temperature, open the door only when necessary. The mobile refrigerated door may be locked if required.

5.0 CLEANING and MAINTENANCE

A thorough, periodic maintenance schedule is required to ensure the longest and most trouble free operation. Maintenance schedules should be aimed at maximizing the efficient use of maintenance personnel, reducing down-time, and providing the orderly acquisition of spare parts support.

5.1 CLEANING

Follow appropriate state and local health (hygiene) regulations regarding all applicable cleaning and to sanitation requirements for food service equipment.

DAILY: Wipe all spills at once.

WEEKLY:

- a) Remove the wire shelves and side rack shelf supports. Clean these items separately using a mild, non-abrasive detergent and soft cloth.
- b) With a mild, non-abrasive detergent and water, use a soft cloth to wipe the interior liner of the storage compartment. Begin at the top and work down. Wipe the gasket surrounding the storage compartment opening.
- c) Using a mild detergent and water, wipe the vinyl door gasket. Make certain to wipe under the gasket to remove any mildew or residue.
- d) Wipe interior surfaces with a clean cloth and sanitizing solution for use on metal and vinyl food contact surfaces. This is an important step to control the build-up of unwanted mildew and mold on the evaporator coil and fan.
- e) Vacuum right, left and back panel grill vents to maintain maximum air flow.
- f) Wipe the interior of the unit with a mild detergent and water. Always wipe with the grain of the stainless steel to prevent scratching the finish.



SCHEDULED MAINTENANCE

6.0 MAINTENANCE

Remember to de-energize the unit by switching the toggle switch located on the control panel to the "OFF" position. Disconnect the unit from the power source.

6.1 MONTHLY INSPECTION & SERVICE

CHECK THE INLET AND OUTLET ENDS OF THE DRAIN LINE to make certain there are no obstructions. If an obstruction is found:

Use compressed air to unblock an obstructed drain line in a forced air evaporator model. Remove the drain line at the evaporator coil and attach an air-line using 60 pounds of pressure. The use of chemicals to clear a clogged drain is not recommended.

6.2 YEARLY INSPECTION & SERVICE

1. INSPECT THE DOOR GASKET for cracks splits and dryness.
2. INSPECT THE MOVING PARTS OF THE DOOR LATCH assembly for signs of wear. Check the screw tightness on both latch and strike.
3. CHECK THE HINGES by opening the door to a 90-degree angle to the cabinet. With minimum pressure, lift up on the outer edge of the door. Replace the hinges if there is an upward movement of 1/2 inch (12.7mm) or more.

6.3 THERMOSTAT ADJUSTMENT

Before making any adjustment to the thermostat, check the door gasket for proper seal. Proper adjustment can be tested by pulling a dollar bill through the gasket seal and feeling a slight resistance. If it is determined a proper seal is maintained around the full perimeter of the gasket, a thermostat adjustment may be necessary.

1. Access the 'machine status' menu by pressing and quickly releasing the "SET" key.
The label of the "SET" folder appears.
2. To display the set point value, press the "SET" key again. The value appears on the display.
3. To change the set point value, use the "UP" and "DOWN" key within 15 seconds.

6.4 CONDENSER FAN & MOTOR REPLACEMENT

1. Disconnect all electrical power to the unit,
2. Remove the ventilation grill.
3. Remove the mounting bolts on the condensing unit base and slide the refrigeration assembly out.
4. Remove the protective shroud from around the motor.
5. Remove the mounting screws at the motor base.
6. Using an allen wrench, loosen the set screw on the blade hub and slide blade from the shaft.
7. Install the new condenser fan by reversing the process.
8. Install the motor by reversing the process.



SCHEDULED MAINTENANCE

6.6 DOOR HANDLE REPLACEMENT

NOTE: It may be necessary to remove the handle assembly in order to get the cabinet through a door opening.

1. Remove the three side mounting screws in latch.
2. Remove two screws in strike.
3. Replace in reverse order.

6.7 DOOR GASKET REPLACEMENT

NOTE: It is suggested that the door be removed from the cabinet and placed face down on a work table.

1. Remove the fasteners and pull old gasket from the retainer.
2. Clean gasket retainer and immediate area.
3. Start new gasket into retainer. After gasket is positioned, replace fasteners.

NOTE: Avoid cutting the gasket if possible.

6.8 DOOR HINGE REPLACEMENT

NOTE: This procedure will require two people. One person to hold the door while the other removes the attachment screws.

1. Using a screwdriver, remove the three screws which attach the butt section of the hinges to the cabinet.
2. With the door detached from the cabinet, remove the screws which attach the second part of the hinge to the door.
3. To install the replacement hinge, reverse the process.

6.9 POWER SWITCH REPLACEMENT

1. Disconnect the unit from the power source.
2. Remove the silicone seal around the perimeter of the front control leader panel.
Remove the panel by lifting straight up.
3. Using a flat blade screwdriver remove the cover plate with switch attached.
4. Remove the wires connected to the switch.
5. Unscrew the lock washer and remove the switch.
6. Reverse the process to install the new switch
7. Remount the panel and reseal the silicone.



CORRECTIVE MAINTENANCE TROUBLE SHOOTING GUIDE

SYMPTOMS	POSSIBLE FAILURE	SOLUTION
Unit does not cool.	• Bad connection at supply cord. • Ill-fitting gasket. • Low refrigerant.	• Check supply cord at outlet. • Tighten strike on door latch. • Check system for leaks and recharge.
Unit does not operate.	• Control failure. • Incorrect voltage. • Bad connection at supply cord. • Failed compressor.	• Adjust control or replace. • Supply correct voltage. • Replace or repair. • Replace.
Unit runs continuously.	• Low on Refrigerant. • Control failure. • Restricted air flow or dirty condenser coil. • Bad condenser fan motor. • Compressor failure. • Ineffective door seal. • Air circulation in storage restricted.	• Leak-check system and recharge. • Adjust control or replace. • Rectify air flow problem and clean condenser. • Check and replace if necessary. • Replace. • Adjust door strike. • Redistribute food and even air flow.
Low head pressure.	• Defective compressor. • Low refrigerant. • Ambient temperature too low.	• Replace. • Leak check system and recharge. • Redistribute food for even air flow.
High head pressure.	• Blocked or dirty condenser. • Ambient temperature too high. • System contains air. • Refrigerant overcharge.	• Clean and remove any obstructions. • Improve room temperature. • Evacuate, change the filter dryer and recharge. • Reduce refrigerant in the system.
Short cycling.	• Mal-adjusted control.	• Adjust control.
<u>This chart is provided for the assistance of qualified technicians only and is not intended for use by untrained or unauthorized service personnel.</u>		



CORRECTIVE MAINTENANCE TROUBLE SHOOTING GUIDE

SERVICE



The components addressed in the section are considered acceptable for repair using standard procedures. The skill level required to perform these repairs vary. Some require specific training and are not intended for use by untrained or unauthorized service personnel.

Procedures requiring refrigerant handling require certification.

If your unit is not operating properly contact Alto-Shaam® for the nearest authorized service agent. These are the only service agents the company will authorize to repair Alto-Shaam® units. Repairs made by any other service agents without prior authorization by Alto-Shaam® will void the warranty on the unit.



FEDERAL LAWS REQUIRE PROPER HANDLING AND DISPOSAL OF REFRIGERANT.

IT IS UNLAWFUL TO VENT ANY REFRIGERANT INTO THE ATMOSPHERE

Alto-Shaam, Inc. urges all individuals responsible for training, teaching or advising installation mechanics and service personnel to emphasize proper handling and charging techniques and strict adherence to limiting refrigerant charge amount to those specifically recommended by the manufacturers of refrigeration, air conditioning or heat-pump systems.



DISCONNECT UNIT FROM POWER SOURCE BEFORE CLEANING OR SERVICING.

CORRECTIVE MAINTENANCE TROUBLE SHOOTING GUIDE

7.0 THERMOSTAT REPLACEMENT

1. Disconnect the unit from the power source.
2. Remove the front control panel and disconnect the electrical terminals.
3. By exerting correct strength slide the brackets from the rear of the control panel.
4. Remove the defective digital thermostat controller and replace with a new controller.
5. Start the system. Allow the system to operate for about 5 minutes. Re-enter the initial set point value.

7.1 FILTER DRYER REPLACEMENT

1. Close liquid line valve and run compressor until the low-side refrigeration gauge indicates 0 pounds. Close suction valve.
2. If the system is slightly pressurized, open both manifold gauge valves and purge the service gauge lines.
3. With manifold gauge valves closed, start the refrigeration system.
4. Attach a drum of 404A refrigerant to the suction service side of the manifold gauges and add refrigerant through the suction side until the liquid sight glass is clear of bubbles.




SERVICE PARTS

MR1			MR1		
DESCRIPTION	QUANTITY	PART NUMBER	DESCRIPTION	QUANTITY	PART NUMBER
RUBBER WHEEL 5"	2	01-WH-00024-01	Evaporator fan motor	1	02-EL-00061-01
ROLLER BRAKE			Filter Drier	1	01-RF-00208-01
RUBBER WHEEL 5"	2	01-WH-00025-01	Accumulator	1	01-RF-00004-01
FIX			Access valve	1	01-RF-00001-01
COMP.220V 50Hz	1	01-CO-00595-01	Door Heater	4 m.	02-EL-00004-01
COND. COIL	1	03-CO-00038-01	Gasket Assy	1	04URALTO1DB001
COND.FAN BLADE	1	01-RF-00057-01	PVC.Shelf(690 x 525)	3	01-SH-00195-01
COND.FAN MOTOR 220V 50Hz	1	01-RF-00045-01	PVC.Shelf(485 x 525)	1	01-SH-00196-01
			Shelf Support	16	01-GR-00080-01
COND.FAN GRILL	1	01-SH-00448-01	S/S Shelf post	4	01-GR-00074-01
DRAIN HOT GAS	1	01-RF-00066-01	Side Handle	2	03-AC-00120-01
Door Hinge	2	01-GR-00028-01	PVC BOX	1	01-PV-00087-01
Door Latch Handle	1	02-AC-00028-01	Power Control Switch	1	02-EL-00078-01
Evaporator coil	1	03-CO-00124-01	Digital Control	1	01-EL-00054-01


SERVICE PARTS (MR1)

ITEM NO.	PART NUMBER	DESCRIPTION
1	03-CO-00124-01	EVAPORATOR COIL
2	02-EL-00061-01	EVAPORATOR FAN MOTOR
3	01-EL-00054-01	DIGITAL THERMOSTAT
4	02-EL-00078-01	POWER CONTROL SWITCH
5	04-URAL TO 1DB001	GASKET ASSY
6	02-AC-00028-01	DOOR LATCH HANDLE
7	01-GR-00028-01	DOOR HINGE
8	03-CO-00038-01	CONDENSER COIL
9	01-RF-00045-01	CONDENSER FAN MOTOR
9a	01-RF-00057-01	CONDENSER FAN BLADE
9b	01-SH-00448-01	CONDENSER FAN GRILL
10	01-CO-00595-01	COMPRESSOR
11	01-RF-00208-01	FILTER DRYER
12	01-WH-00025-01	RUBBER WHEEL 5" FIX
13	01-WH-00024-01	RUBBER WHEEL #5" ROLLER BRAKE
14	03-AC-00120-01	SIDE HANDLE
15	01-GR-00074-01	S/S SHELF POST
16	01-GR-00080-01	SHELF SUPPORT
17	01-SH-00195-01	PVC SHELF (690x525)
18	01-SH-00196-01	PVC SHELF (485x525)

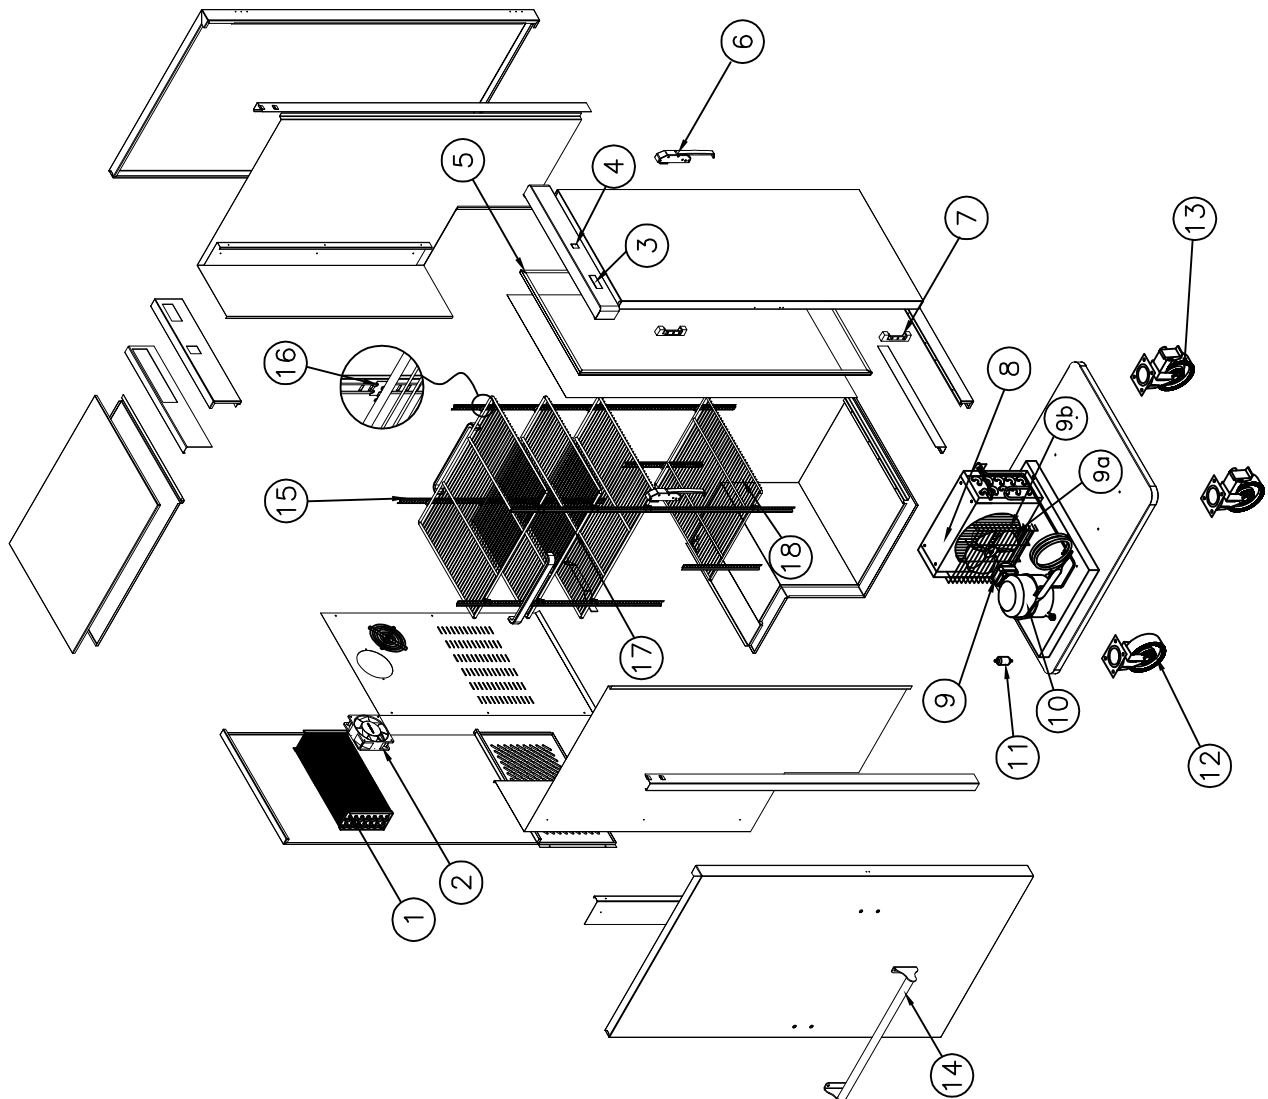


SERVICE PARTS CONDENSING UNIT(MR1)


ITEM NO.	PART NUMBER	DESCRIPTION
1	01-CO-00595-01	COMPRESSOR
2	01-CO-00595-01	CONDENSER COIL
3	01-RF-00045-01	COND. FAN MOTOR
4	01-RF-00057-01	COND. FAN BLADE
5	01-SH-00448-01	COND. FAN GRILL
6	01-RF-00208-01	FILTER DRIER
7	01-RF-00004-01	ACCUMULATOR
8	01-RF-00066-01	DRAIN HOT GAS

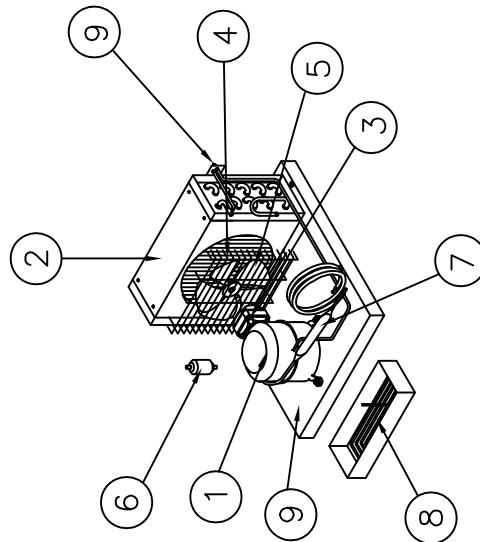


PARTS IDENTIFICATION

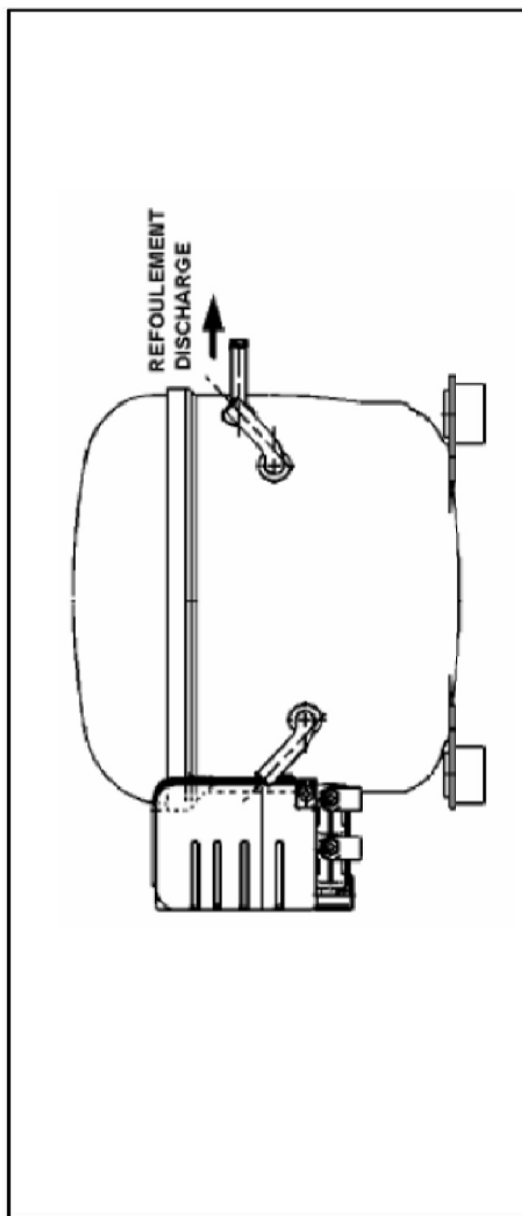

COMPRESSOR FOR MR1

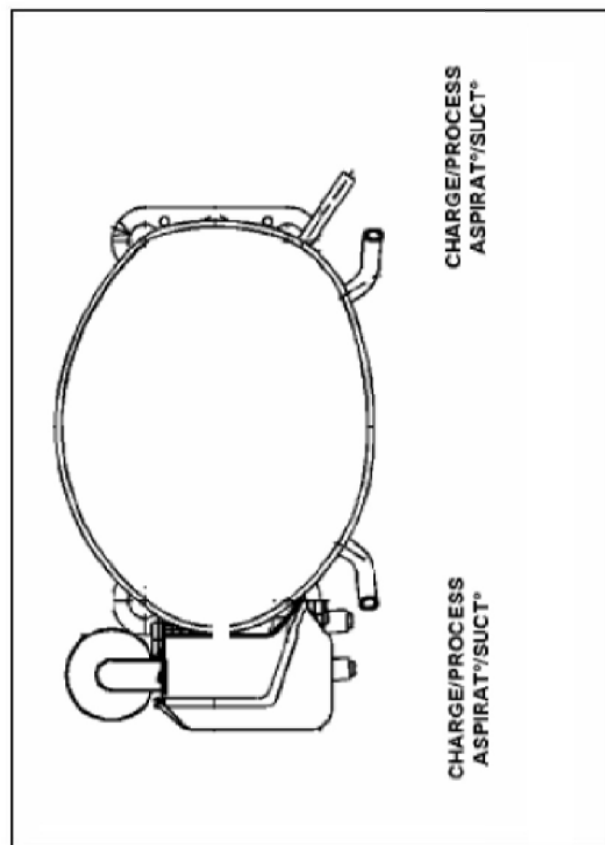

WIRING DIAGRAM FOR MOBILE REFRIGERATED CART(MR1)

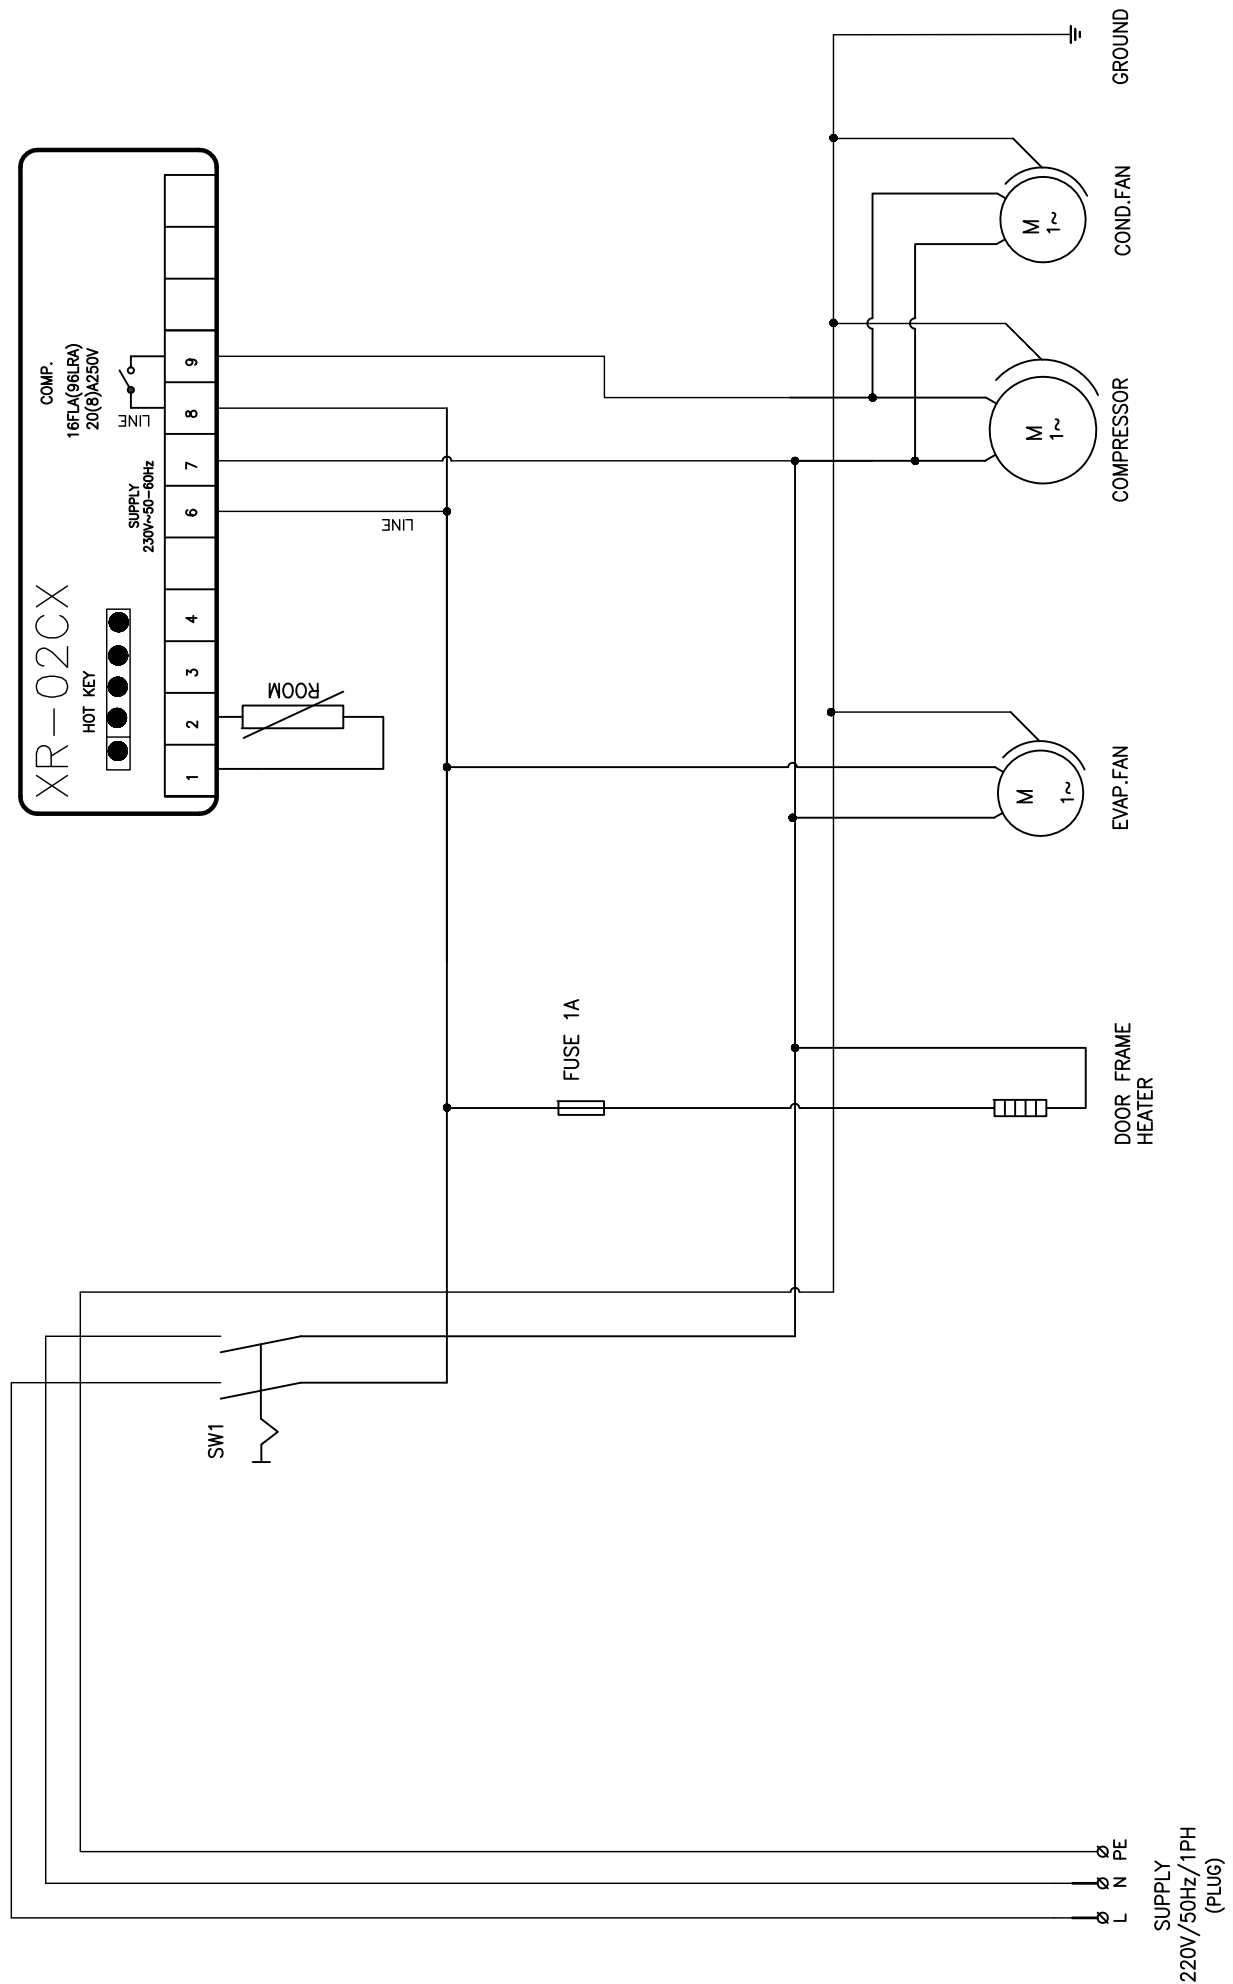

TRANSPORTATION DAMAGE and CLAIMS



All Alto-Shaam equipment is sold F.O.B. shipping point, and when accepted by the carrier, such shipments become the property of the consignee.

Should damage occur in shipment, it is a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the merchandise, unless negligence can be established on the part of the shipper.

1. Make an immediate inspection while the equipment is still in the truck or immediately after it is moved to the receiving area. Do not wait until after the material is moved to a storage area.
2. Do not sign a delivery receipt or a freight bill until you have made a proper count and inspection of all merchandise received.
3. Note all damage to packages directly on the carrier's delivery receipt.
4. Make certain the driver signs this receipt. If he refuses to sign, make a notation of this refusal on the receipt.
5. If the driver refuses to allow inspection, write the following on the delivery receipt:
Driver refuses to allow inspection of containers for visible damage.
6. Telephone the carrier's office immediately upon finding damage, and request an inspection. Mail a written confirmation of the time, date, and the person called.
7. Save any packages and packing material for further inspection by the carrier.
8. Promptly file a written claim with the carrier and attach copies of all supporting paperwork.

We will continue our policy of assisting our customers in collecting claims which have been properly filed and actively pursued. We cannot, however, file any damage claims for you, assume the responsibility of any claims, or accept deductions in payment for such claims.

LIMITED WARRANTY

Alto-Shaam, Inc. warrants to the original purchaser only that any original part that is found to be defective in material or workmanship will, at Alto-Shaam's option, subject to provisions hereinafter stated, be replaced with a new or rebuilt part.

The original parts warranty period is as follows:

For the refrigeration compressor on Alto-Shaam Quickchillers™, five (5) years from the date of installation of appliance.

For the heating element on Halo Heat® cooking and holding ovens, as long as the original purchaser owns the oven. This excludes holding only equipment.

For all other original parts, one (1) year from the date of installation of appliance or fifteen (15) months from the shipping date, whichever occurs first.

The labor warranty period is one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first.

Alto-Shaam will bear normal labor charges performed during standard business hours, excluding overtime, holiday rates or any additional fees.

To be valid, a warranty claim must be asserted during the applicable warranty period. This warranty is not transferable.

THIS WARRANTY DOES NOT APPLY TO:

1. Calibration.
2. Replacement of light bulbs, door gaskets, and/or the replacement of glass due to damage of any kind.
3. Equipment damage caused by accident, shipping, improper installation or alteration.
4. Equipment used under conditions of abuse, misuse, carelessness or abnormal conditions, including but not limited to, equipment subjected to harsh or inappropriate chemicals, including but not limited to, compounds containing chloride or quaternary salts, poor water quality, or equipment with missing or altered serial numbers.
5. Damage incurred as a direct result of poor water quality, inadequate maintenance of steam generators and/or surfaces affected by water quality. Water quality and required maintenance of steam generating equipment is the responsibility of the owner/operator.
6. Damage caused by use of any cleaning agent other than Alto-Shaam's Combitherm® Cleaner, including but not limited to damage due to chlorine or other harmful chemicals. **Use of Alto-Shaam's Combitherm® Cleaner on Combitherm® ovens is highly recommended.**
7. Any losses or damage resulting from malfunction, including loss of product, food product, revenue, or consequential or incidental damages of any kind.
8. Equipment modified in any manner from original model, substitution of parts other than factory authorized parts, removal of any parts including legs, or addition of any parts.

This warranty is exclusive and is in lieu of all other warranties, express or implied, including the implied warranties of merchantability and fitness for a particular purpose. In no event shall Alto-Shaam be liable for loss of use, loss of revenue or profit, or loss of product, or for any indirect, special, incidental, or consequential damages. No person except an officer of Alto-Shaam, Inc. is authorized to modify this warranty or to incur on behalf of Alto-Shaam any other obligation or liability in connection with Alto-Shaam equipment.



Effective November 1, 2012

RECORD THE MODEL AND SERIAL NUMBER OF THE APPLIANCE FOR EASY REFERENCE.

ALWAYS REFER TO BOTH MODEL AND SERIAL NUMBER IN ANY CONTACT WITH ALTO-SHAAM REGARDING THIS APPLIANCE.

Model: _____ Date Installed: _____
Voltage: _____ Purchased From: _____
Serial Number: _____

W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 • U.S.A.

PHONE: 262.251.3800 • 800.558-8744 USA/CANADA

FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY

1000-MR1 (50HZ) OPERATION MANUAL # 03/14

www.alto-shaam.com

14/14

PRINTED IN U.S.A.